
DMX HDMI Player


Model: V82K




Playback SD-card video use DMX-512

1. INPUT and OUTPUT Port

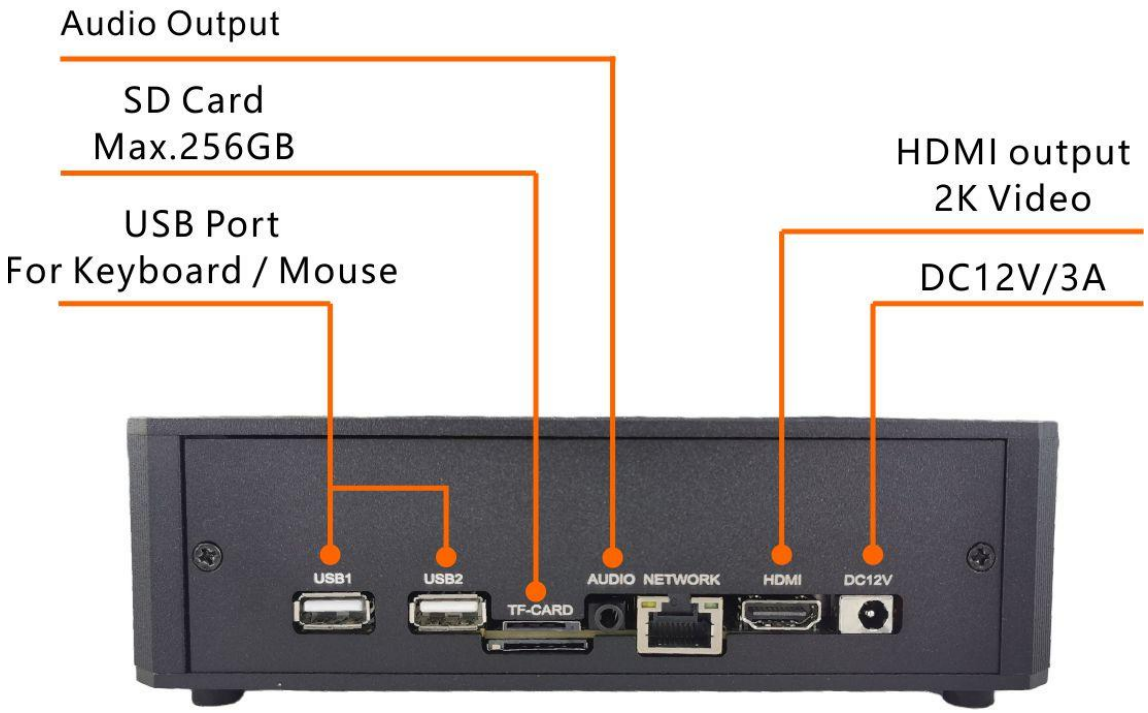

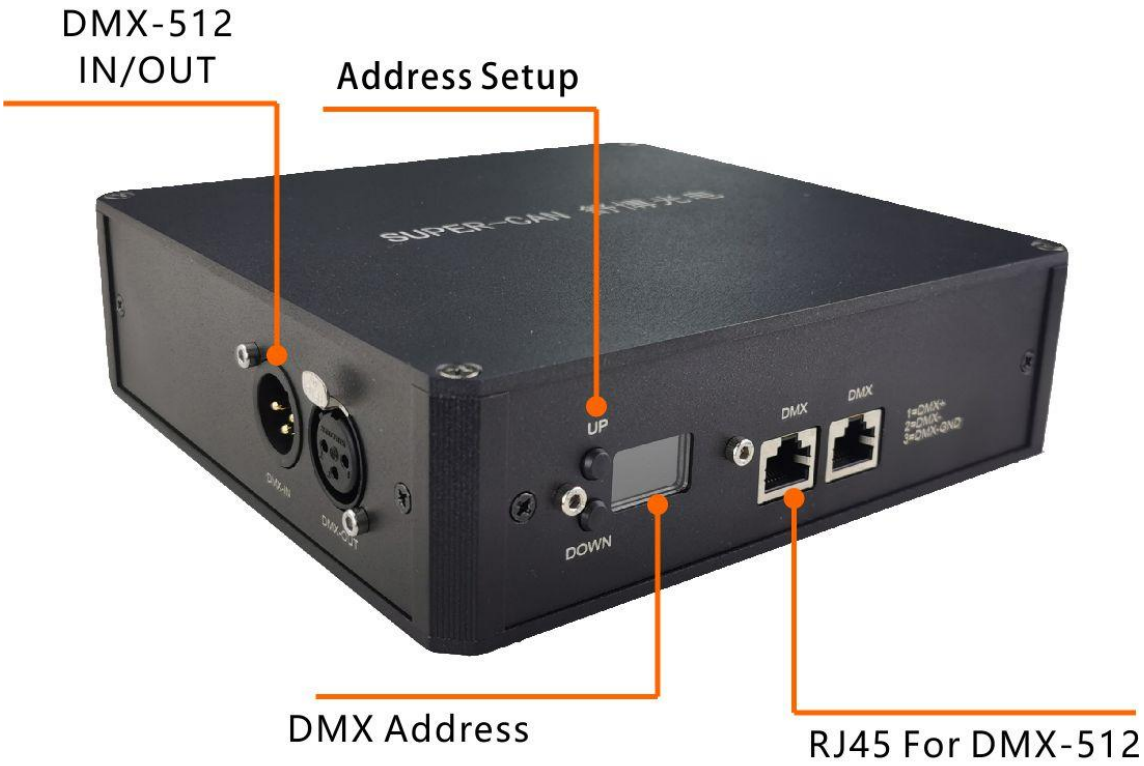
DMX-512
IN/OUT
Address Setup
UP
DOWN
DMX
DMX
DMX Address
RJ45 For DMX-512

2. Drawing

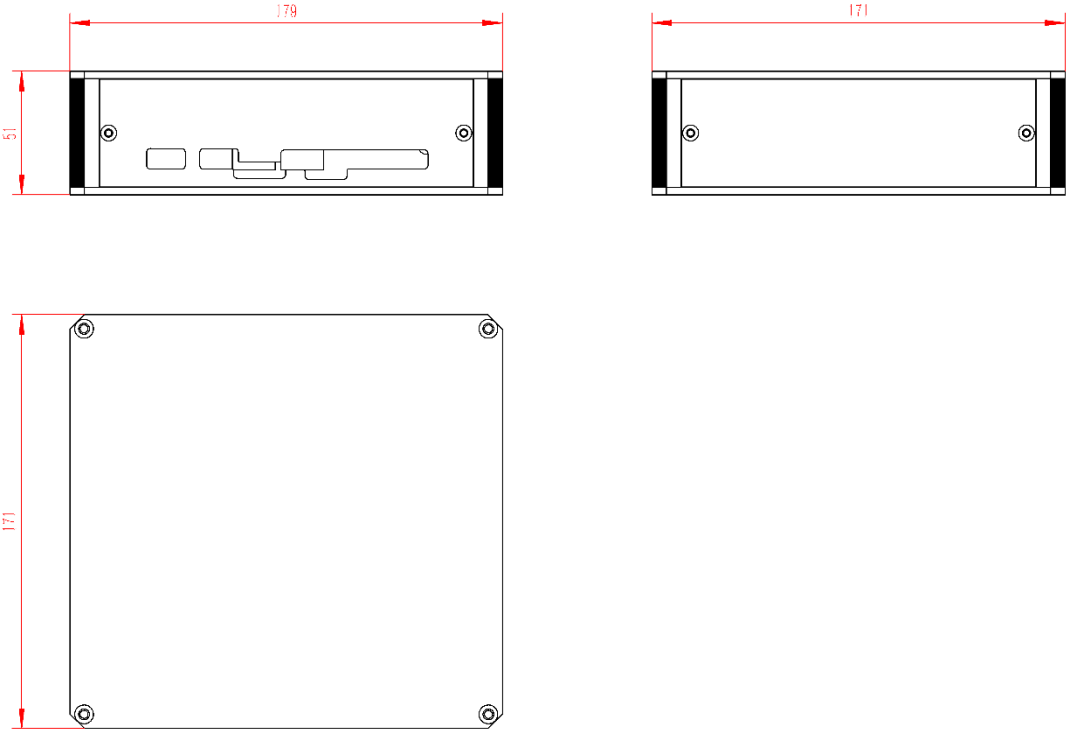

179
51
171
171

3. DMX Channels


Channels	Value	Function
1	0-126	Play
	127-255	Pause
2	0	Blackout
	1-255	Select Folder. Standard mode: 255x Folders Small console mode: 10x Folders #1 1-26 #2 27-52 #3 53-78 #4 79-104 #5 105-130 #6 131-156 #7 157-182 #8 183-208 #9 209-234 #10 235-255
3	0	Blackout
	1-255	Select Video Files Standard mode: 255x Files Small console mode: 10x Files #1 1-26 #2 27-52 #3 53-78 #4 79-104 #5 105-130 #6 131-156 #7 157-182 #8 183-208 #9 209-234 #10 235-255
4	0-127	Blackout when Play finish
	128-255	Repeat single file
5	0-255	Speed (100~200%)
6	0-255	Volume (0~100%)

- Press the Up or Down Button in front to change the DMX base address.

4. File Store:
   a) Copy the video to SD Card x:\SDVideo\Y\Z.mp4. [x:\]is the SD-Card disk number. Y is the folder number ，Z is the video file can be select by DMX-512.

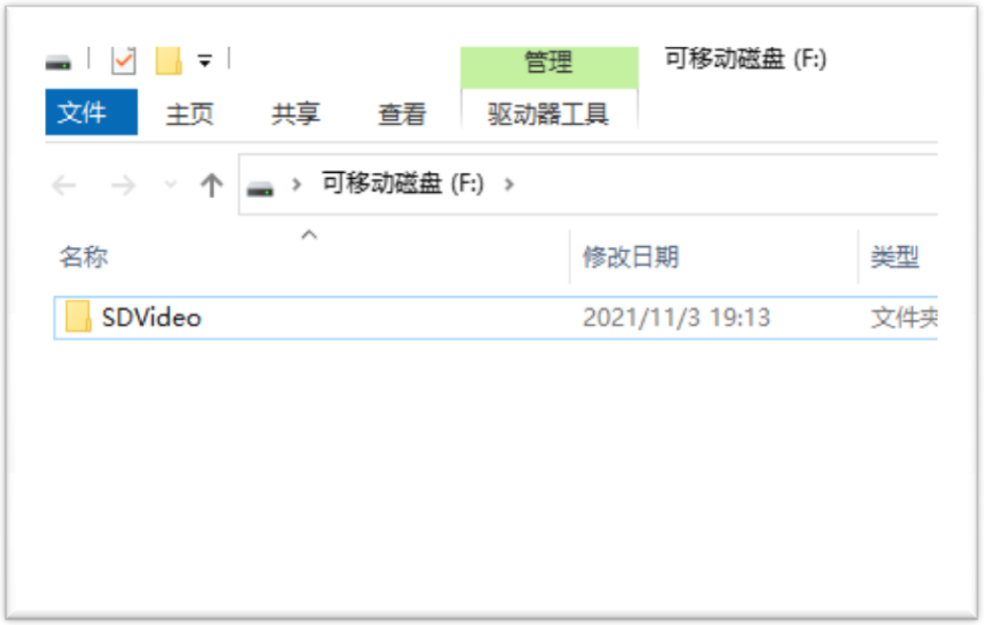


SD-Card Create a folder [SDVideo]

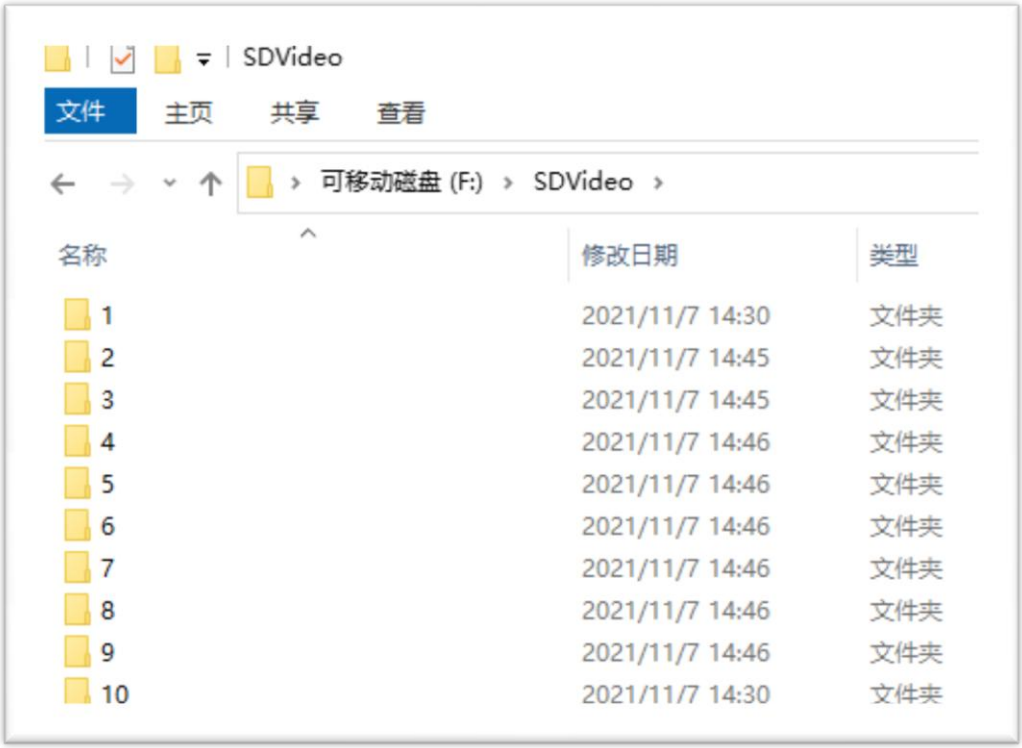


In [SDVideo] folder You can put 255 sub-folder, folder name from 1~255. You can select the folder by DMX-512 channel 2.

b) The file Should be like this “1.mp4” to “255.mp4” is the number for DMX selection.The DMX Selection only search the file name’s number.You can select the video file which to play by DMX-512 channel 3.

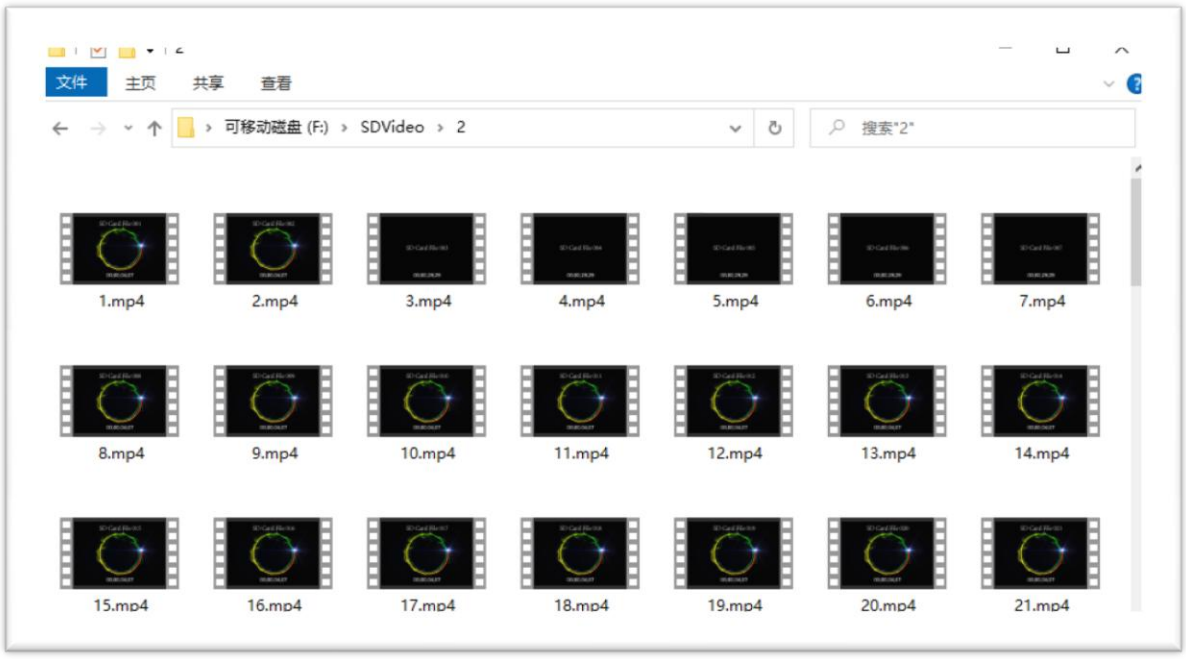

c) If you insert a new SD card into the device, please format it to FAT32 first, then copy the folders and files onto it.

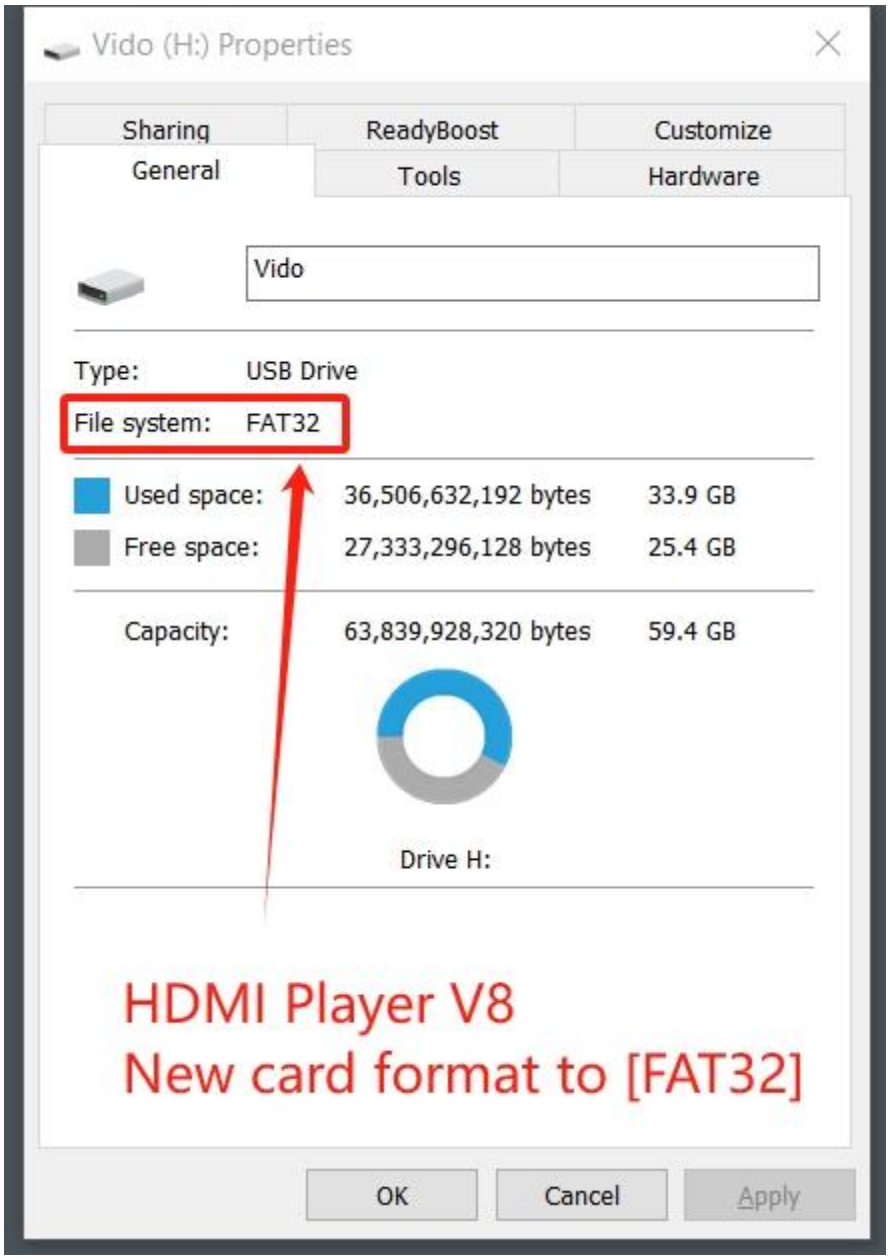


5. Technical Parameter:
   Power: DC 12V / 3A
   Media Store: TF Card (Class10 A1)
   TF Card Standard: Class 10 / A1
   Max Size of TF Card: 256GB (Larger TF card not test yet!)
   Video Format: mp4 file in H264 coder
   Video Output: HDMI V1.4 (2560*1440@30fps / 1920*1080@30fps)
   DMX Connector: RJ45 / XLR-3pins / XLR-5pins **(optional)**
   Audio Output: TRS 3.5mm
   Device Dimension: 179x171x51mm

   Tested cards >100 MB/s worked normally; 40–50 MB/s cards showed delays.


6. Flashing Firmware via USB-to-DMX Cable

   If You need to upgrade the DMX function:

   1) Power OFF the Video Player
   2) Connect the USB to DMX cable from your PC to the device. Follow these 5 steps

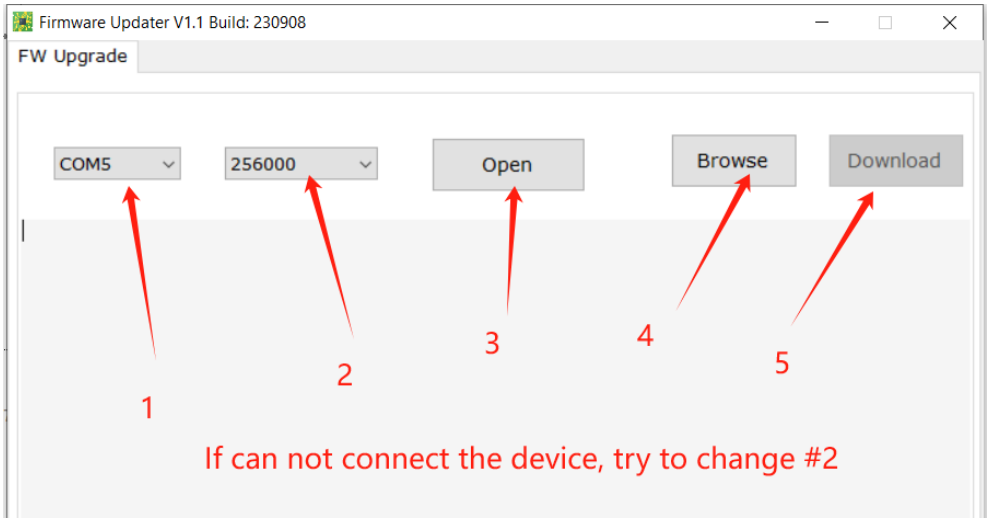

   3) Power ON the device, You will see the package is loading to the device. Once the loading is finished, Please wait a few seconds, the device will automatic start.

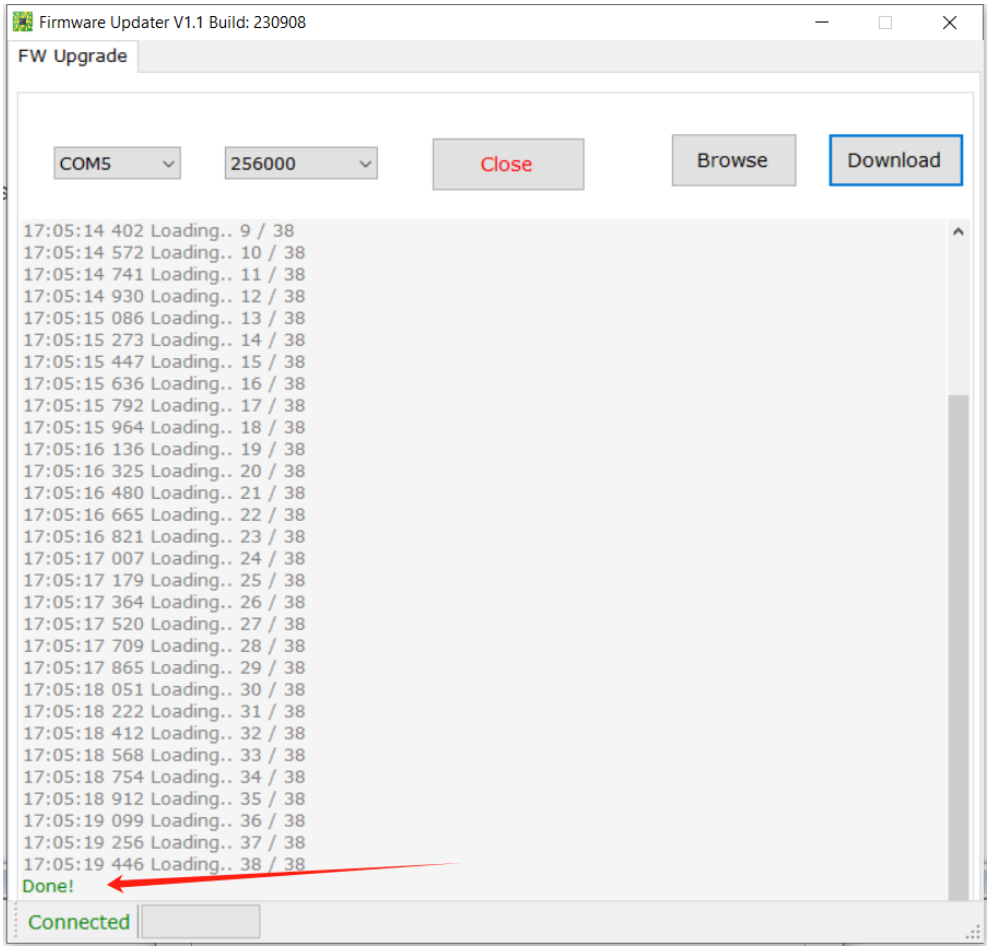

   4) If flashing the firmware fails, just repeat the step.

Package download: https://drive.google.com/drive/folders/11Oup8zgtR--V_yRsT_ARN54vSERv8NDy

Q&A:

1. **The player can not play video form the SD card.**
   Try to format the SD card on the video player first. And then create the [SDVideo] and copy the file on your PC.

2. **The TRS audio do not have output.**
   Check the setting on the video player. You can choose the audio output to TRS analog port or HDMI.

3. **Cannot control by DMX.**
   a) Check the folder read permissions on video player
   b) Check the DMX display window if the signal is green.
   c) Check the SD card / SDVideo folder / sub-folder / video file all are correct.

More informationfor V82K:
https://www.supercanlight.com/V82K

SUPERCAN Light Impressed You by Innovation!

http://www.supercanlight.com
linda@supercanlight.com